

S40 driver installation (COM port use for e.g. Download Software or PMA)



RI
Ersteller


Anleitung
Art des Dokuments

75AP101
Dokument-Nr.


02.10.2024
Erst.-Datum

This document is a step by step guide for the installation of the drivers of a S40.

1. Overview Device Manager without anything connected:

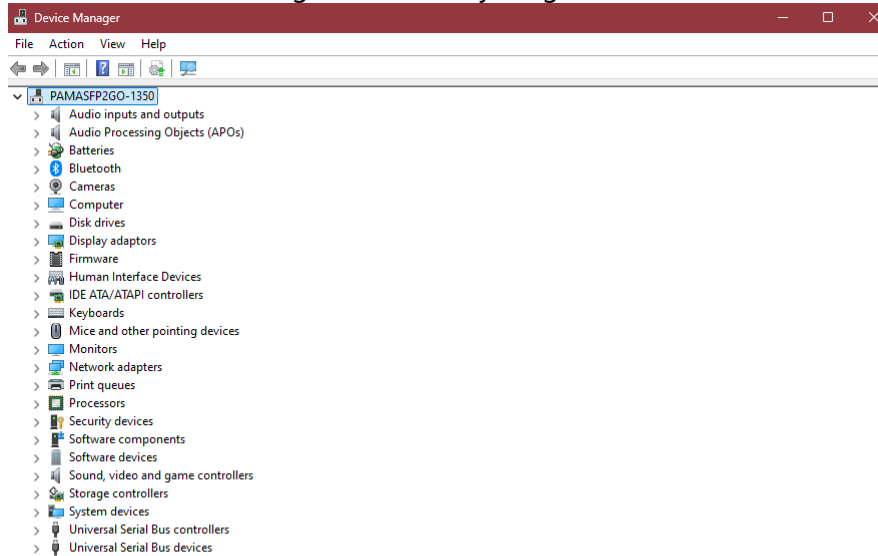

2. Overview Device Manager when S40 connected for the first time:

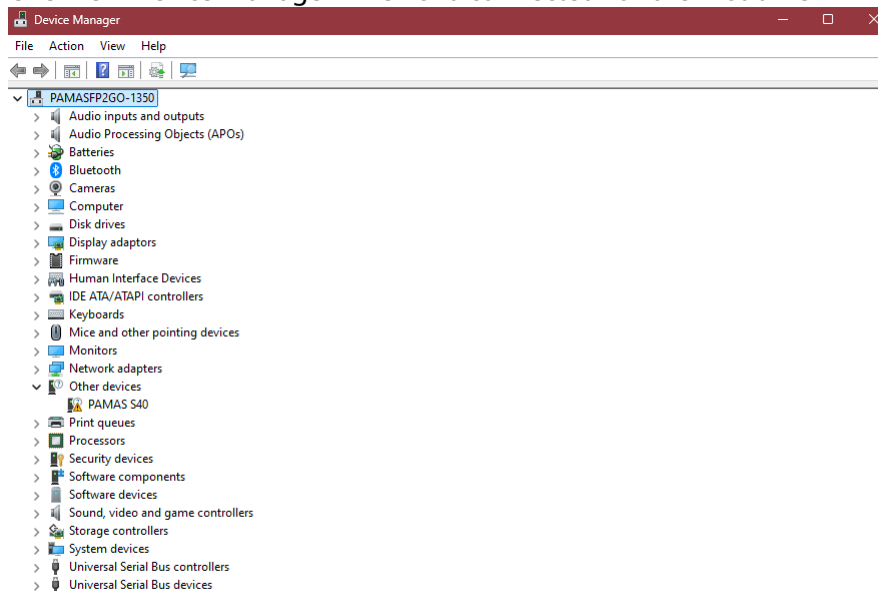

S40 driver installation (COM port use for e.g. Download Software or PMA)




RI
Ersteller

Anleitung
Art des Dokuments


75AP101
Dokument-Nr.

02.10.2024
Erst.-Datum

3. PAMAS driver on USB flash drive:

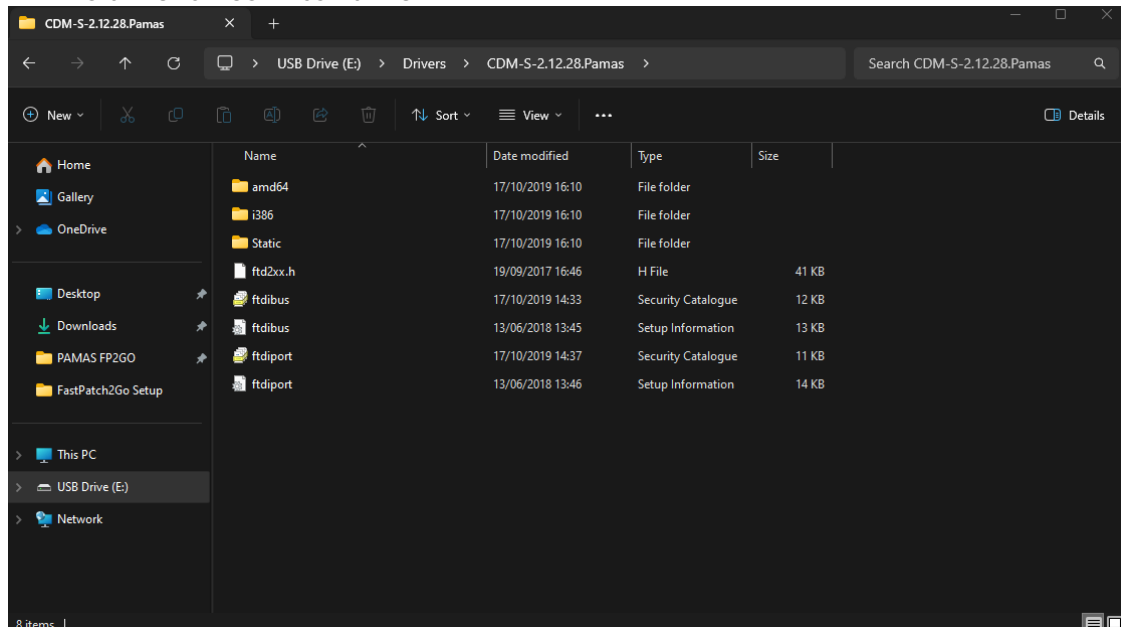

4. Device Manager Right click to Update Drivers – local browse – folder path to USB flash drive:

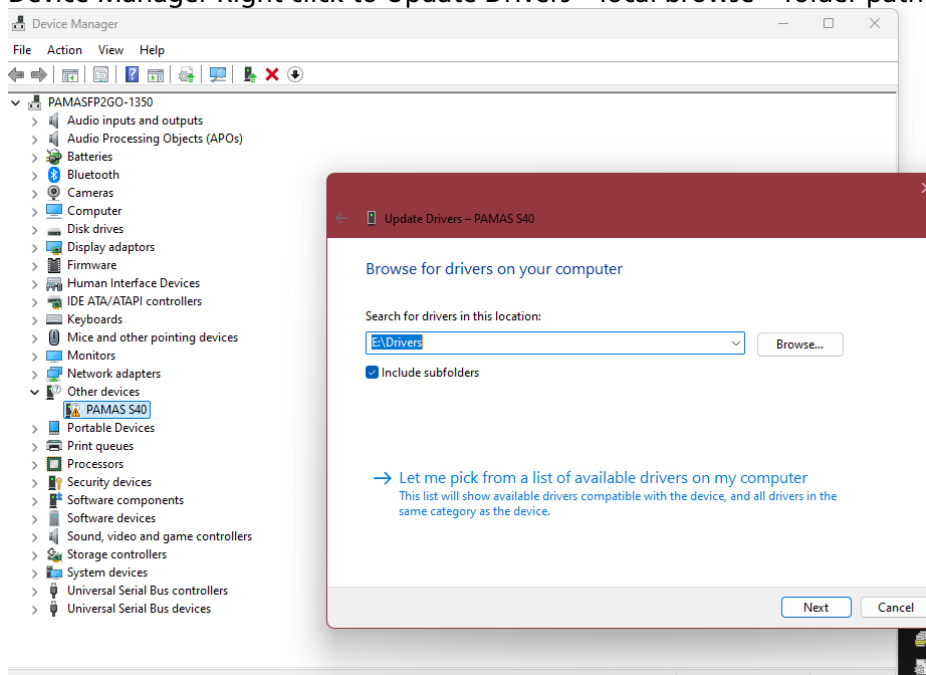

S40 driver installation (COM port use for e.g. Download Software or PMA)




RI
Ersteller

Anleitung
Art des Dokuments


75AP101
Dokument-Nr.

02.10.2024
Erst.-Datum

5. Confirmation of installation of driver software:

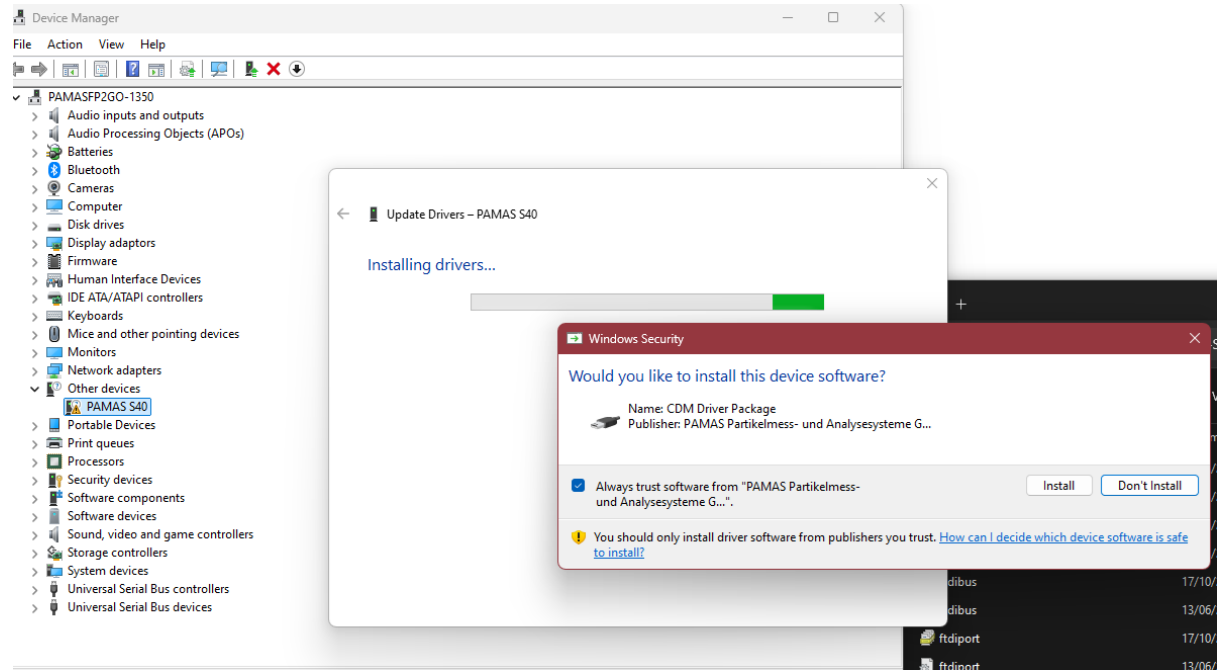

6. Window for successful installation:

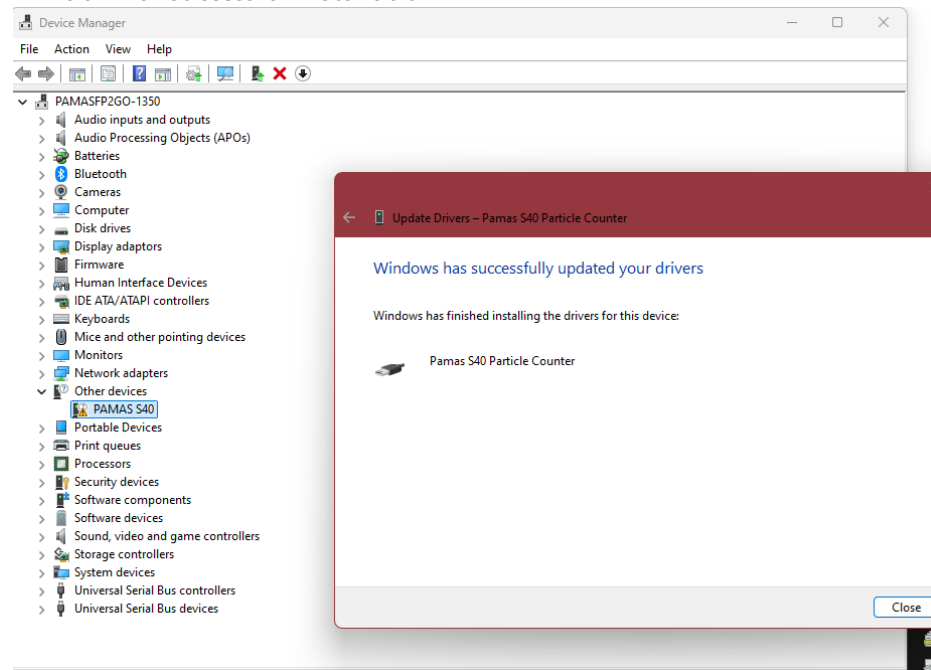

S40 driver installation (COM port use for e.g. Download Software or PMA)




RI
Ersteller

Anleitung
Art des Dokuments


75AP101
Dokument-Nr.

02.10.2024
Erst.-Datum

7. Device Manager Pamas S40 is now under USB controller:

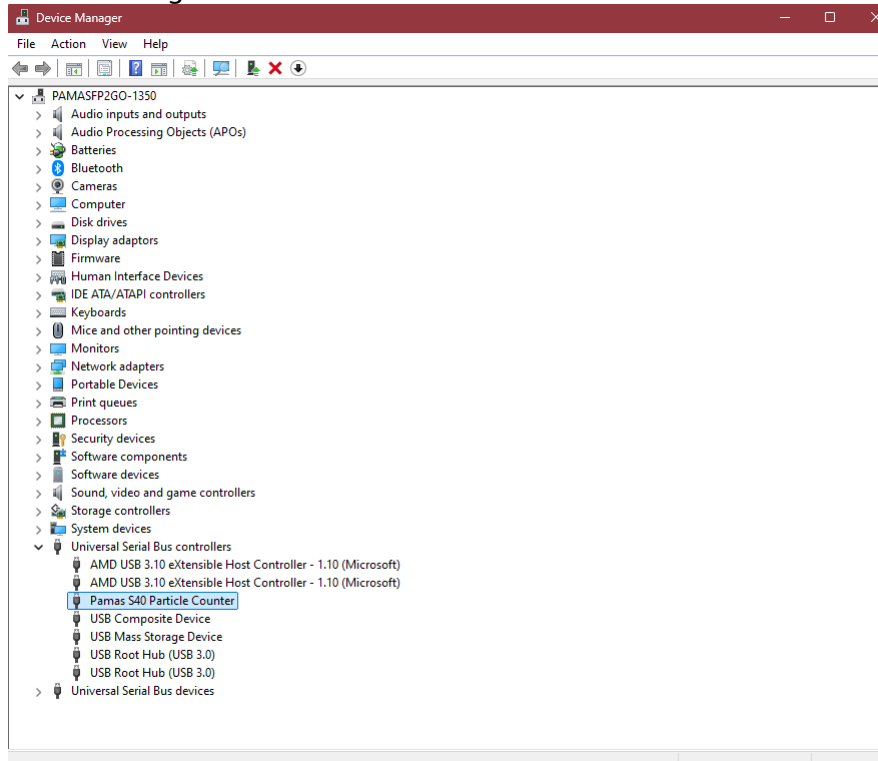

8. For the COM port, the Load VCP needs to be activated with right click on Pamas S40 and Properties/Advanced: [check also 75PA168 - COM port not shown for PAMAS devices (S40, S4031, S50, ...)]

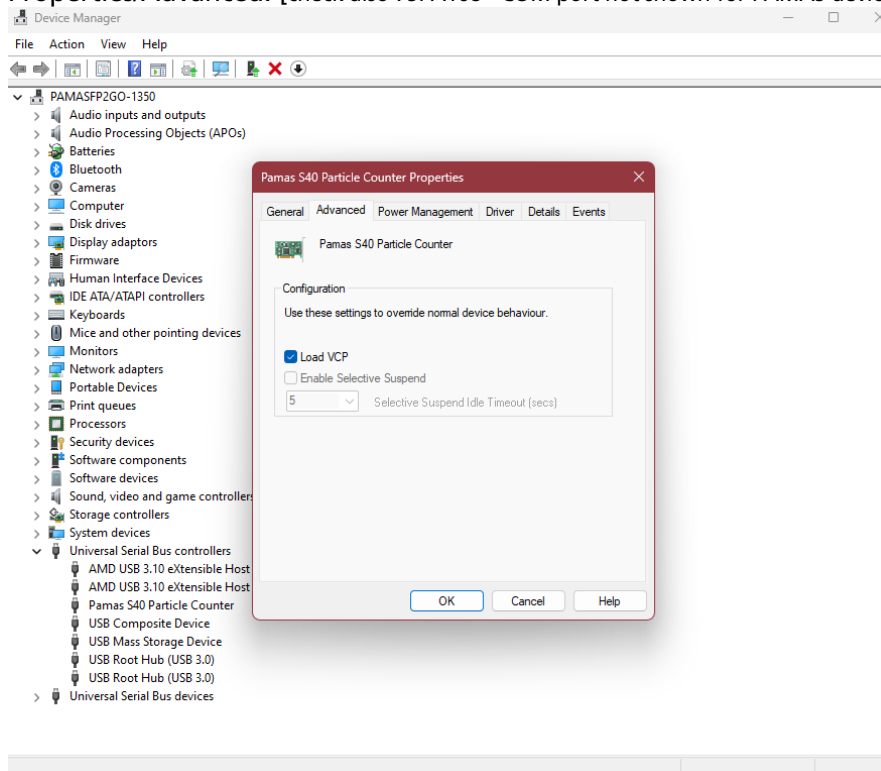

S40 driver installation (COM port use for e.g. Download Software or PMA)




RI
Ersteller

Anleitung
Art des Dokuments


75AP101
Dokument-Nr.

02.10.2024
Erst.-Datum

9. Device Manager View after Load VCP is activated and the connection was refreshed:

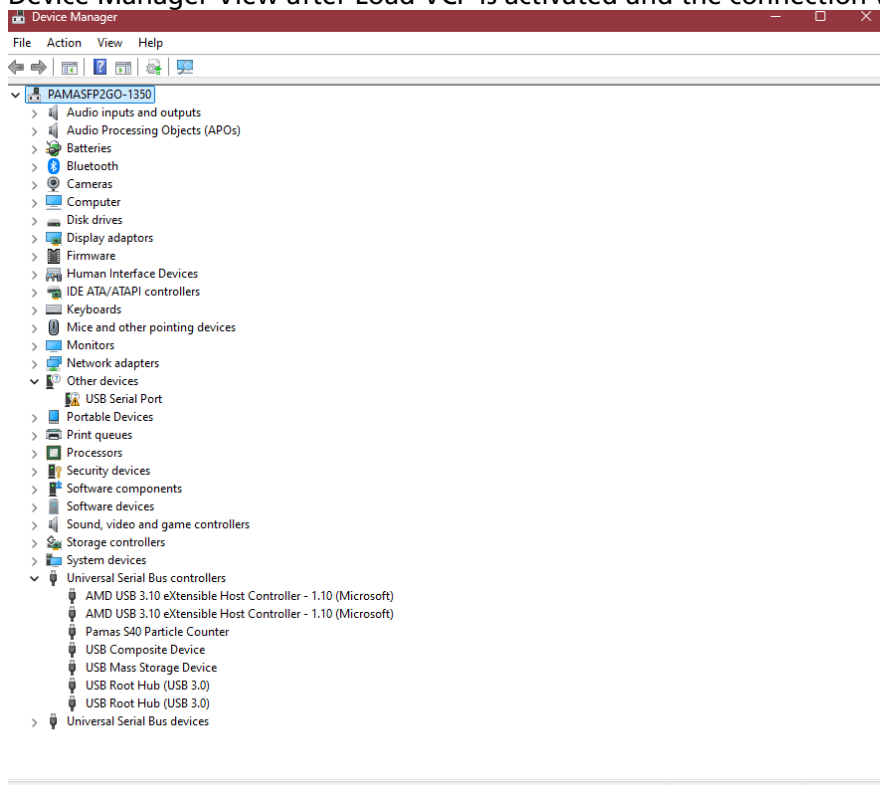

10. Right click on USB Serial Port and update driver locally:

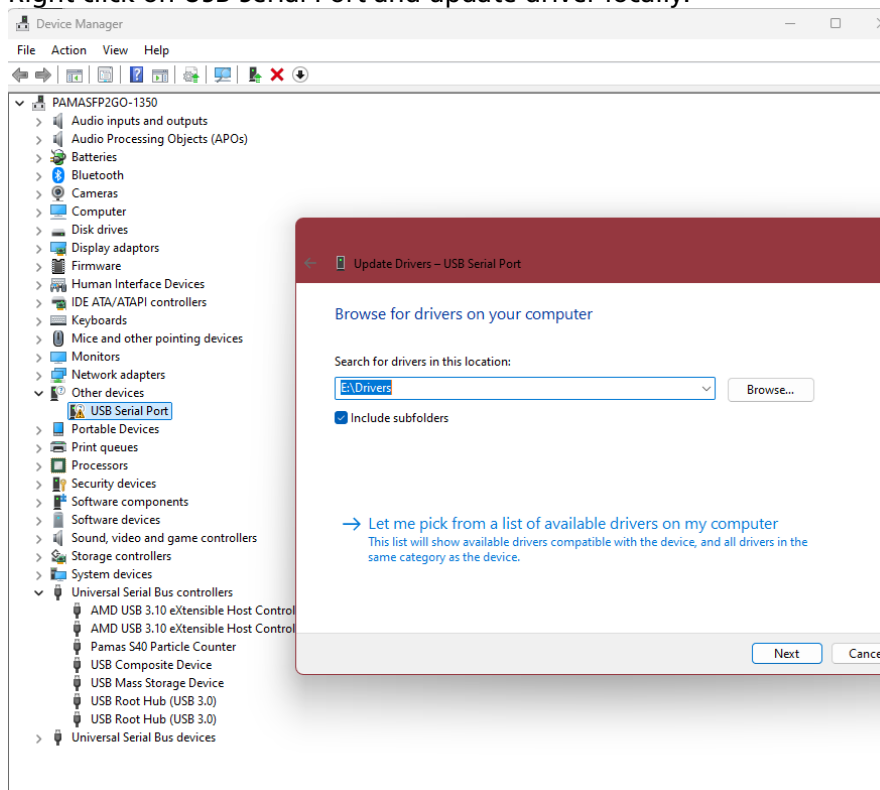

S40 driver installation (COM port use for e.g. Download Software or PMA)




RI
Ersteller

Anleitung
Art des Dokuments

75AP101
Dokument-Nr.

02.10.2024
Erst.-Datum

11. Window for successful installation:

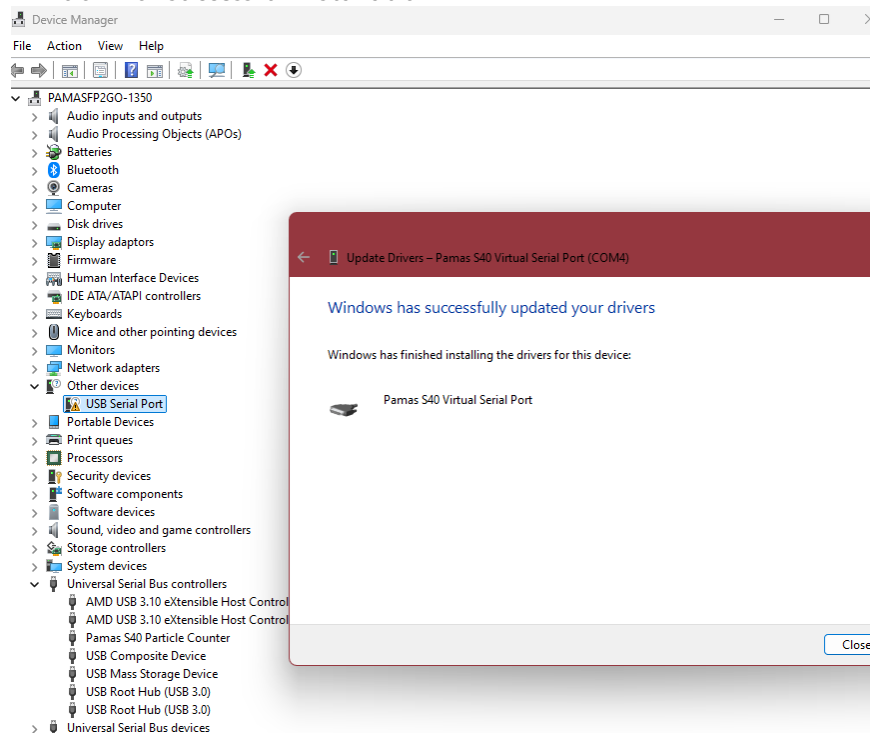

12. The COM port is now visible under ports:

