

PAMAS S50

Online particle counter for oil condition monitoring



PAMAS S50 Fixed installed high resolution online particle counter for oil condition monitoring

Application:

- Hydraulic oil
- Lubricating oil
- Test rigs
- Parts cleaning

- cost effective, high performance, laser based online particle counting system with eight size channels
- flexible integration into industrial monitoring facilities
- LED display showing the contamination class code according ISO 4406 in the size classes > 4 µm(c), > 6 µm(c) and > 14 µm(c)
- The volumetric cell design of PAMAS sensors measures 100% of the sample flow and guarantees highest accuracy and reproducibility.
- The particle number and size distribution of all 8 size channels is reported in real time to the PC or PLC (programmable logic controller). The optional analysing software saves the measuring results and shows them in tables and graphs. This makes trends and events easily visible.
- Due to its measuring accuracy and its trend monitoring and alarm features, PAMAS S50 reduces the risk of failures and ensures the reliability of the controlled operating system.


PAMAS S50

Recognise failures at an early stage



The **PAMAS S50** measures the cleanliness of mineral and synthetic oils in different industrial environments. Its rugged construction makes it resistant against mechanical, environmental and electrical threats.

together with the particle counts in real time to the PC. This interface function makes the **PAMAS S50** a powerful instrument for condition monitoring.

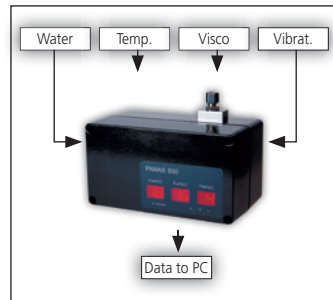

PAMAS S50 may serve as interface for condition monitoring transferring four analogue signals (4-20 mA) to a PC.

Condition Monitoring - more value for less money:

The online particle counter **PAMAS S50** optionally has four analogue inputs on board for four 4-20 mA signals that may be sent to a PC. Additional condition monitoring data coming from external sensors - e.g. water content, oil temperature, viscosity, vibration or pressure – can be sent

Early alert in case of abrasion:

Beginning failures in hydraulic and lubricating oil systems result in the early appearance of big particles. Due to its eight size channels, the online particle

counter **PAMAS S50** is able to detect bigger particles and instantaneously alerts in case of abrasion or machine failure. Production breakdown can therefore be prevented in an early stage.

Size μm (c)	Particles / 100 ml
> 4	29497
> 6	7090
> 10	2393
> 14	960
> 21	383
> 25	190
> 38	133
> 70	12

More than just providing the standard ISO code, PAMAS S50 measures the particle number in eight different size channels and gives an early alert in case of machine failure caused by bigger particle sizes (e.g. wear and abrasion).

Software:

PAMAS provides two different software tools for the analysis of the measuring results:

- **POV (PAMAS Online Visualisation):** Software for long-term trend monitoring of measuring results
- **PCT (PAMAS Component Test):** Software for parts cleaning and roll off cleanliness testing

Pressurised and pressureless sampling:

If the application supplies pressure, the unit can be operated without internal pump. **PAMAS S50** continuously determines the flow rate through the sensor to achieve precise measuring results independent of the input pressure. The variable flow rate ranges between 5 and 50 ml/min. For pressureless applications, **PAMAS S50** can be equipped with an additional pump (**PAMAS S50 P**). The wear resistant ceramic piston pump controls the flow rate to 25 ml/min at a pressure range from 0 to 7 bar.



PAMAS S50P with integrated pump for pressureless applications

Technical data:

Counter:

Particle measurement in eight size channels:
 > 4 μm (c), > 6 μm (c),
 > 10 μm (c), > 14 μm (c),
 > 21 μm (c), > 25 μm (c),
 > 38 μm (c) and > 70 μm (c)

Viscosity:

up to 1000 cSt
 (depending on system pressure)

Pressure range:

- without pump: 0,2 - 20 bar
- with additional pump: 0 - 7 bar

Volumetric sensor: PAMAS HX-LD-50/50

Calibration range:
 4-70 μm (c) according to
 ISO 11171

Maximum particle concentration:
 24,000 p/ml at a flow rate
 of 25 ml/min and a coincidence
 rate of 7.8%. The sensor
 measures triple codes from
 0/0/0 to 22/22/22 according
 to ISO 4406.

Size:

- without pump:
 220 mm x 120 mm x 120 mm
- with additional pump:
 230 mm x 200 mm x 180 mm

Weight:

- without pump: 3,7 kg
- with additional pump: 5,0 kg

Case protection:

IP 64



PAMAS HEAD OFFICE, Dieselstraße 10, D-71277 Rutesheim, Phone: +49 7152 99 63 0, Fax: +49 7152 54 86 2, E-Mail: info@pamas.de

PAMAS USA, 1408 South Denver Avenue, Tulsa, OK 74119 USA, Phone: +1 918 743 6762, Fax: +1 918 743 6917, E-Mail: ClayBielo@earthlink.net

PAMAS FINLAND, Arwidssonintie 25, FIN-41340 Laukaa, Phone: +358 14 25 22 10, Fax: +358 14 25 22 12, E-Mail: esko.niiranen@pamas.de

PAMAS BENELUX, Battelsteeweg 455 A2, B-2800 Mechelen, Phone: +32 15 28 2010, Fax: +32 15 28 2009, E-Mail: paul.pollmann@pamas.de

PAMAS FRANCE, Tour Part Dieu, 129 rue Servient, F-69326 Lyon Cedex 03, Mobile: +33 6 25 33 20 41, E-Mail: eric.colon@pamas.fr

PAMAS LATIN AMERICA, Rua Eduardo Sprada, 2819 / Suite 2, Curitiba-PR 81270-010, Brazil, Phone/Fax: +55 41 3022 5445, E-Mail: marcelo.aiub@pamas.de

PAMAS INDIA, No. 203, I floor, Oxford House, #15 Rustam Bagh Main Road, Bangalore 560017, India, Phone: +91 80 41 15 00 39, E-Mail: info@pamas.in

PAMAS HISPANIA, Calle Zubilleta No. 13 1ºB, ES-48991 Algorta, Mobile: +34 67 75 39 699, E-Mail: julian.malaina@pamas.de

PAMAS UK, Daresbury Science & Innovation Campus, Keckwick Lane, Daresbury, Cheshire WA4 4FS, Mobile: +44 79 17 71 33 66, E-Mail: graeme.oakes@pamas.de

Please visit our website at www.pamas.de